

## Cleaning Instructions for the 1 oz. Gallon Bottle Pump



#1 – Remove pump and wash sealant off of the pump.




#2 – Unscrew the head from the pump body.



#3 – Remove inner spring and clean any sealant and fiber from the spring and barrel.




#4 – Carefully remove the head from the piston assembly....being careful not to lose the small check ball in the head of the assembly.

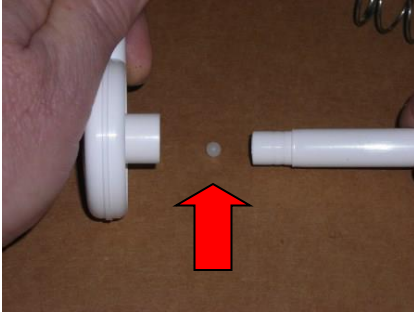


#5 – Remove the check ball from the head assembly. Clean off all the fiber that is wrapped around the ball and wash with water. *Note: If you lose this check ball, the pump will not function.*



#6 – Wash the head out with water until water comes out of the spout. Rinse the piston assembly out with water.

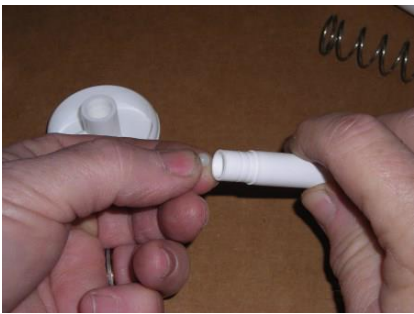

#7 – Carefully reinsert the check ball into the piston assembly and reattach the head to the piston assembly.

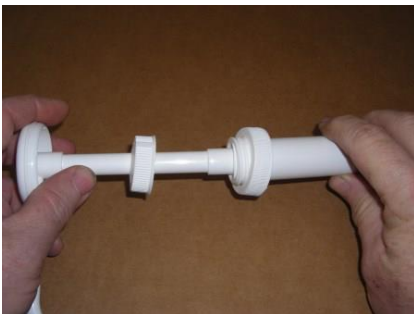

#8 – Insert the piston assembly into the barrel.



#9 – Thread the collar on and hand tighten.